

# BALCONY & PUB ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966  
New Holland, PA

## #67 Bistro Table, #68 (30") Pub Table, #70 (42") Pub Table



### Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

### Included Hardware

**A**  20 2 1/2" Screws

### Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. Turn the table top upside down. Position each leg snugly into the corner and fasten using 2 (A) 2 1/2" Screws. (Illustration 2) Fasten the remaining 3 legs.
3. Now prepare to fasten the shelf. Align the boards so they run the same direction as the boards on the table top. Position the side of the legs 3/4" from the nearest joint in the shelf boards.
4. Then fasten each leg to the shelf using 2 (A) 2 1/2" Screws. Then fasten the brace to the table top using 2 (A) 2 1/2" Screws. Repeat on all the remaining legs. (Illustration 4)



Illustration 2

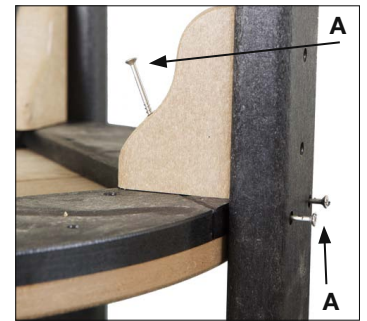


Illustration 3