

ENGLISH GARDEN
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#920-S English Garden Chair Poly



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		6 1/4" x 2 1/2" Lag Bolt
B		28 1 1/2" Screws
C		4 2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, fasten the front seat rail to the back and leg combo. Fasten using 2 (C) 2" Screws. (Illustration 2)
3. After fastening the front seat rail to the back and leg combo, fasten the leg brace to the lower rail on the back and leg combo. Fasten using 2 (B) 1 1/2" Screws. (Illustration 3)
4. Repeat steps 2 & 3 and fasten the other back and leg combo to the front seat rail and leg brace.
5. Set upright. Start 3 (A) 1/4" x 2 1/2" Lag Bolts in the three spots on the upright part of the back. (Illustration 4) Repeat on the other side.
6. Fasten the back of the chair on the one side using the 1/4" x 2 1/2" Lag Bolts that were started in step 5. (Illustration 5) Fasten the bottom bolt to the back. Repeat on the other side.
7. Fast the back seat rail using 1/4" x 2 1/2" Lag Bolts that was started in step 5. (Illustration 6) Repeat on the other side.
8. To fasten the seat slats, start at the first one and keep the slat flush with front, using the spacer as a guide, fasten each slat an equal distance apart using 4 (B) 1 1/2" Screws on each slat. (Illustration 7)

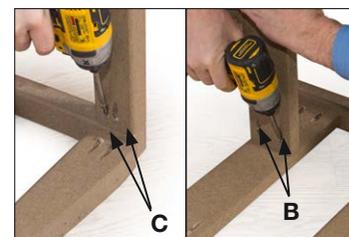


Illustration 2

Illustration 3



Illustration 4



Illustration 5



Illustration 6

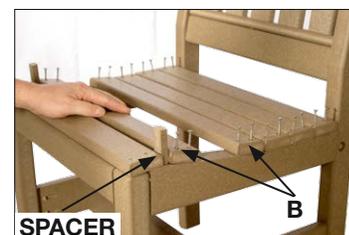


Illustration 7