

FANBACK SERIES ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#365 Fanback Rocker



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		6 1/4" x 3/4" Carriage Bolt
B		6 1/4" Nut
C		2 1/4" x 3" Lag Bolt
D		2 1/4" x 3 1/2" Lag Bolt
E		4 2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright. Set the back into the seat. Hold flush to the seat. Fasten using 4 (E) 2" Screws. (Illustration 2)
3. Now fasten the arm/leg combo. Fasten the arm of the arm/leg combo to the back using 1 (D) 1/4" x 3 1/2" Lag Bolt. Then fasten the leg of the arm/leg combo to the seat using 2 (A) 1/4" x 3/4" Carriage Bolts & 2 (B) 1/4" Nuts. (Illustration 3) Repeat on the other side.
4. Then fasten the rocker runners to the bottom of the legs. Fasten the runner to the front leg using 1 (A) 1/4" x 3/4" Carriage Bolt & 1 (B) 1/4" Nut. Then fasten the runner to the back leg using 1 (D) 1/4" x 3 1/2" Lag Bolt. (Illustration 4) Repeat on the other side.

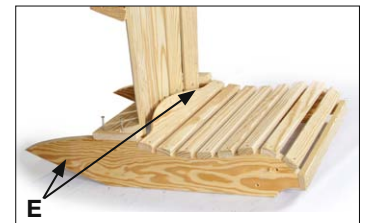


Illustration 2

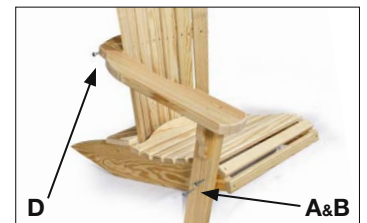


Illustration 3



Illustration 4