

FANBACK SERIES ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#701 Ottoman



Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. With the ottoman laying upside, fasten the legs. Line up the pre-drilled holes and fasten using 4 (A) $\frac{1}{4}$ " x $2\frac{1}{2}$ " Carriage Bolts & 4 (A) $\frac{1}{4}$ " Nuts. (Illustration 2)

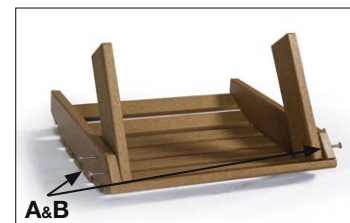


Illustration 2

Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- $\frac{7}{16}$ " Socket or $\frac{7}{16}$ wrench

Included Hardware

A		4	$\frac{1}{4}$ " x $2\frac{1}{2}$ " Carriage Bolt
B		4	$\frac{1}{4}$ " Nut