

BALCONY & PUB
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
 New Holland, PA

#77 Swivel Pub Chair



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket

Included Hardware

A		2	1/4" x 2 1/2" Carriage Bolt
B		4	1/4" x 3" Carriage Bolt
C		6	1/4" Nut
D		4	1/4" x 1 1/2" Lag Bolt

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces. .
2. Fasten the arm of the arm/leg combo to the back of the seat using 1 (A) 1/4" x 2 1/2" Carriage Bolt & 1 (C) 1/4" Nut. Then fasten the leg of arm/leg combo to the seat using 2 (B) 1/4" x 3" Carriage Bolts & 2 (C) 1/4" Nuts. (Illustration 2) Repeat on the other side.
3. With a #2 sq. drive bit, remove the 2nd slat from the back. (Illustration 3).
4. Turn the swivel a half turn. Set the seat on the base. Line up the swivel plate holes with the pre-drilled on the base. Using a 7/16 socket, insert a 1 (D) 1/4" x 1 1/2" Lag Bolt into the pre-drilled hole. (Illustration 4) Do not tighten. Repeat the process until you have inserted all 4 lag bolts. Then tighten the bolts.
5. Replace the 2nd slat that you removed in step 3.

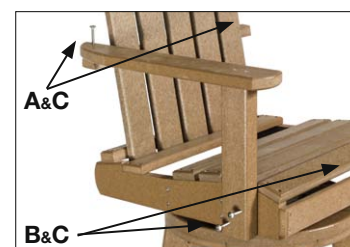


Illustration 2

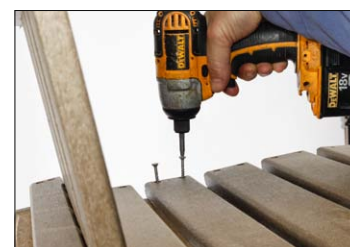


Illustration 3



Illustration 4