

CHIPPENDALE ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA




#921 Chippendale Chair



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

A		6	1/4" x 3" Lag Bolt
B		2	1/4" x 3 1/2" Lag Bolt
C		10	2 1/2" Screws

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, fasten the arm and leg combo to the seat. Fasten using 4 (C) 2 1/2" Screws. (Illustration 2) Repeat on the other side.
3. After fastening the legs, fasten the front rail to the seat. Fasten the end using 1 (B) 1/4" x 3" Lag Bolt. Repeat on the other end. Then fasten the small brace to the leg using 1 (C) 2 1/2" Screw. Repeat on the other end. (Illustration 3)
4. Then fasten the back rail to the seat. Line the rail up with the seat. Fasten using 1 (A) 1/4" x 2 1/2" Lag Bolt. Repeat on the other side. (Illustration 4)
5. Now fasten the back to the legs. Fasten using 2 (A) 1/4" x 2 1/2" Lag Bolts. Repeat on the other side. (Illustration 5)



Illustration 2



Illustration 3

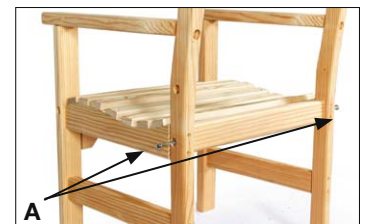


Illustration 4

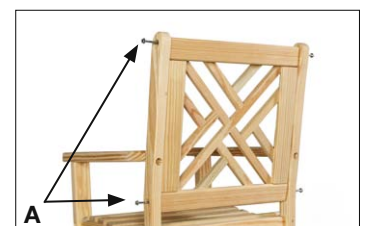


Illustration 5