

ENGLISH GARDEN
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA


#940 English Garden Bench Poly



Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

Included Hardware

| | | | |
|----------|---|----|------------------------|
| A |  | 6 | 1/4" x 2 1/2" Lag Bolt |
| B |  | 2 | 1/4" x 3" Lag Bolt |
| C |  | 14 | 2 1/2" Screws |

Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, fasten the arm and leg combo to the seat. Fasten using 4 (C) 2 1/2" Screws. (Illustration 2) Repeat on the other side.
3. After fastening the legs, fasten the front rail to the seat. Hold to marks and line up with the pre-drilled holes. Fasten the end using 1 (B) 1/4" x 3" Lag Bolt. Repeat on the other end. Then fasten the center of the front rail and the small brace to the leg using 4 (C) 2 1/2" Screws. (Illustration 3)
4. Then fasten the back rail to the seat. Line the rail up with the seat. Fasten using 2 (A) 1/4" x 2 1/2" Lag Bolts. Fasten the rail in the center using 2 (C) 2 1/2" Screws. (Illustration 4)
5. Now fasten the back to the legs. Fasten the back using 2 (A) 1/4" x 2 1/2" Lag Bolts. (Illustration 5) Repeat on the other side.



Illustration 2

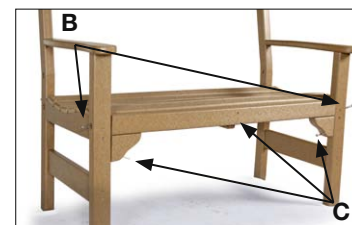


Illustration 3

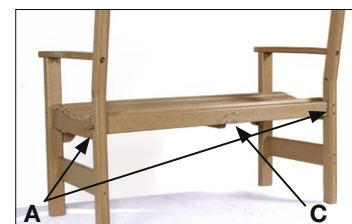


Illustration 4



Illustration 5