

# FANBACK SERIES ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966  
New Holland, PA

## #114 Fanback Glider



### Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16" Socket or 7/16 wrench

### Included Hardware

<b>A</b>		8	1/4" x 3" Carriage Bolt
<b>B</b>		8	1/4" Nut
<b>C</b>		8	1/4" x 3" Lag Bolt
<b>D</b>		2	1/4" x 3 1/2" Lag Bolt
<b>E</b>		4	2" Screws

### Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, set the seat upright. Set the back into the seat. Hold flush to the seat. Fasten using 4 (E) 2" Screws. (Illustration 2)
3. Lay the chair on its back and fasten the arm and leg combo. Fasten the arm of the arm and leg combo to the back using 1 (D) 1/4" x 3 1/2" Lag Bolt. Then fasten the legs of the arm and leg combo to the seat using 4 (A) 1/4" x 3" Carriage Bolts and 4 (B) 1/4" Nuts. (Illustration 3) Repeat on the other side.
4. Set the chair upright on its base and fasten the glider rails to the glider base. Fasten using 4 (C) 1/4" x 3" Lag Bolts. (Illustration 4) Repeat on the other side.



Illustration 2

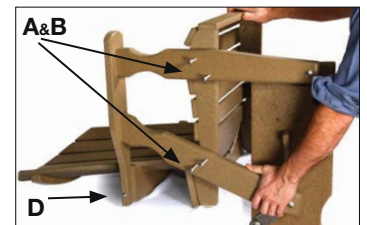


Illustration 3

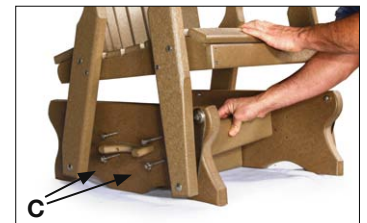


Illustration 4