

WEST CHESTER
ASSEMBLY INSTRUCTIONS



(717) 354-8998 • (877) 560-5966
New Holland, PA

#410 & 416 4' Swings

West Chester & Curve Back Swings



Instructions:

1. Unpack items from box(es). Be sure to match any numbers & letters that you may find on the pieces.
2. To begin, fasten the seat to the back using 2 (A) 1/4" x 2 1/4" Carriage Bolts, 4 (B) 1/4" x 2 1/2" Carriage Bolts & 6 (D) 1/4" Nuts. (Illustration 2)
3. After fastening the seat to the back, attach the arm to the back using a 1 (C) 1/4" x 3" Carriage Bolt & 1 (D) 1/4" Nuts. Repeat on the opposite side. (Illustration 3)
4. Add the eye bolts for the chain. Fasten a (G) 3/8" Nuts & (E) 4" Eye Bolt to the back in the pre-drilled hole. (Illustration 4)
5. Fasten a (G) 3/8" Nuts & (F) 5" Eye Bolt upright under the arm. It should be at a slight angle for the chain. (Illustration 5). See Illustration 3 for better view of placement.

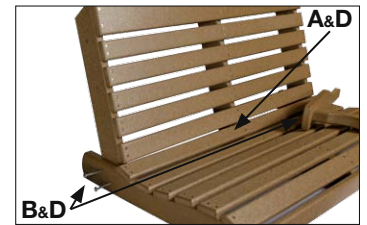


Illustration 2



Illustration 3



Illustration 4










Illustration 5

Tools Required

- Hammer
- #2 Square Head Bit
- Power Drill
- 7/16 & 9/16 Socket or 7/16 or 9/16 Wrench

Included Hardware

A		2	1/4" x 2 1/4" Carriage Bolt
B		4	1/4" x 2 1/2" Carriage Bolt
C		2	1/4" x 3" Carriage Bolt
D		8	1/4" Nut
E		2	4" Eye Bolt
F		2	5" Eye Bolt
G		4	3/8" Nuts